

Residential Gateway™

SRC-300 remote control

Using Your Remote Control

This Quick Start Guide will step you through the basics of using your SRC-300 remote control with various types of Motorola RG2200 Residential Gateways.

Your installer or NSP (network service provider) will install your RG2200 and program your remote control(s) to operate your RG2200. Your remote controls can even be programmed to operate the RG2200 remotely, from a different room in your home. Once programmed, each remote control can be used to turn the TV on or off, control TV volume, change channels, and control one broadcast stream. With each RG2200, you may receive up to three broadcast streams in your home. This allows household members to view up to three broadcast channels simultaneously.

For more detailed information, see the User's Guide that came with your Residential Gateway.

Changing Channels

To change the channel using the remote control buttons, do one of the following:

- Press the up or down channel button.
- Enter the channel number on the number key pad and press SELECT.
- Enter the channel number on the number key pad and wait 5 seconds. The Gateway will tune to the channel entered.


Controlling TV Volume

If the remote has already been programmed to control your TV, you can press the up or down on the volume key to raise or lower the volume on your TV.

To mute the TV volume, press the MUTE button on the remote control. Press it again to unmute the TV.

Remote Control Keys

- a. LED: Lights when any button on the remote is pressed. Also, when pressed and held, starts programming sequences.
- b. Exit: Exits current function.
- c. Directionals: Moves cursor in program guide and menus.
- d. Info: Displays current channel and program information.
- e. Day back: Move program guide back 24 hours.
- f. Back: Returns to a previous screen or menu, if applicable.
- g. Vol: Adjusts TV volume.
- h. Mute: Mutes and unmutes TV sound.
- i. VOD: Launches VOD (Video On Demand) menu.
- j. Home: Displays your service provider's web page, if available.
- k. Number pad: selects channels.
- l. Last: Recalls last channel.
- m. Power: Powers TV on/off and tunes to default channel.
- n. A, B, C, D and Text: Reserved for use with Teletext and other 3rd party applications.
- o. Page up and down: Pages up and down in interactive program guide and menu screens.
- p. Select: Selects channel or highlighted option.
- q. Day forward: Moves program guide forward 24 hours.
- r. Play, Record, Pause and Stop: Video on Demand controls.
- s. Ch: Changes program channel.
- t. Guide: Displays interactive program guide.
- u. PPV: Displays Pay Per View menu.
- v. Call ID: Opens Caller ID screen.
- w. Menu: Displays Main Menu.
- x. Fav: Scans through favorite channels.

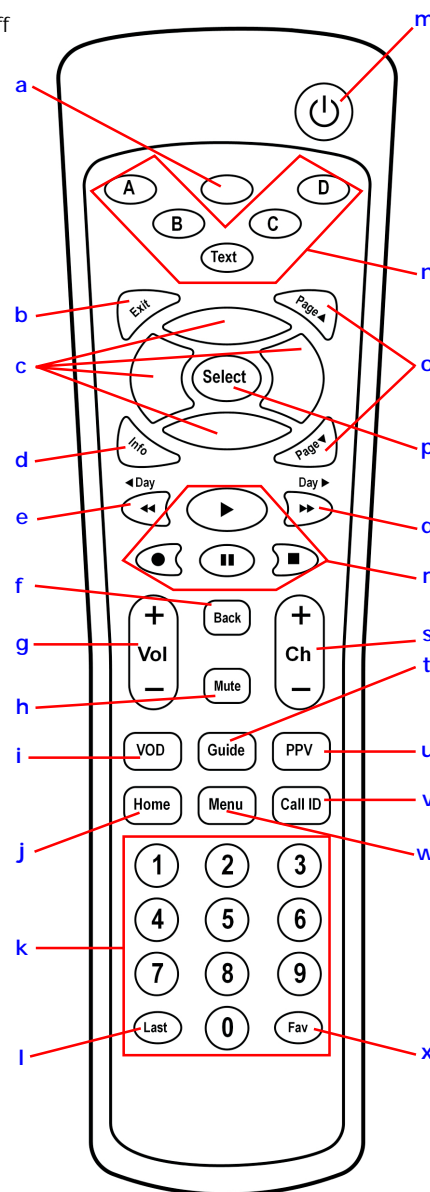

Programming the SRC-300

Several parameters can be programmed into the SRC-300 memory. They include:

1. Remote ID (associates each remote control with a broadcast stream and selects IR or UHF mode).
2. Gateway ID (set to uniquely identify your Gateway when multiple Gateways exist in the neighborhood).
3. TV Code (allow the SRC-300 to control your TV by selecting the TV code for your TV's make and model).
4. Operating Mode (set your remote to be in SRC-200 compatibility mode or return it to SRC-300 native mode).

Programming the Remote Control ID

Each remote control is programmed to control one broadcast stream. With each RG2200, you may receive up to 3 streams in your home. In addition, remote controls can be programmed to operate in IR or UHF mode.

- If your remote control is programmed for IR mode, it requires a direct line-of-sight to function. In other words, you need to point an IR remote directly at the Gateway. You can only use an IR remote to operate a TV located in the same room as the Gateway.
- When you want to control a TV that is not in the same room as the Gateway, the remote must be in UHF mode. Also, if you have secondary TVs connected to the Gateway, your remote control must be programmed to operate in UHF mode.

To program the remote ID:

1. Press and hold the **LED** key until it starts to blink.
2. Press the **REC** key. The LED stops blinking and stays solid.
3. Press the **A** key.
4. Press the single digit for the remote ID as follows
 - **0** = IR mode
 - **1** = UHF stream one
 - **2** = UHF stream two
 - **3** = UHF stream three

Programming the Gateway ID

To program the Gateway ID:

1. Press and hold the **LED** key until it starts to blink.
2. Press the **REC** key. The LED stops blinking and stays solid.
3. Press the **B** key.
4. Press the three digits for the Gateway ID. (The valid range for remotes in SRC-300 native mode is 004-999, while the valid range for SRC-200 compatibility mode is 004-255).

Programming the TV Code

To program the TV code:

1. Press and hold the **LED** key until it starts to blink.
2. Press the **REC** key. The LED stops blinking and stays solid.
3. Press the **C** key.
4. Enter the three digits of the TV code. (TV Codes are listed in the User's Guide that came with your Gateway.)

Programming the Operating Mode

By default, the SRC-300 remote control is set to SRC-200 compatibility mode. To change the operating mode:

1. Press and hold the **LED** key until it starts to blink.
2. Press the **REC** key. The LED stops blinking and stays solid.
3. Press the **D** key.
4. Press **0** to select SRC-200 compatibility mode or **1** to select SRC-300 native mode.

Other Programming and Playback Modes

Information on how to perform other programming and playback functions are included in the User's Guide included with your Gateway. These functions include:

1. Gateway ID playback
2. Gateway ID LED playback
3. Remote ID LED playback
4. Operating Mode LED playback
5. TV code LED playback
6. TV code scan function
7. Factory reset function

Copyright © 2004 by Motorola / Next Level Communications. All rights reserved.

Information contained in this document is subject to change without notice.

January 2004.

MOTOROLA / Next Level Communications
6085 State Farm Drive
Rohnert Park, CA 94928



MOTOROLA
Next Level Communications